


ASSEMBLY INSTRUCTIONS FOR YOUR

# Jonathan Adler CAPRI PENDANT SHAPE 1

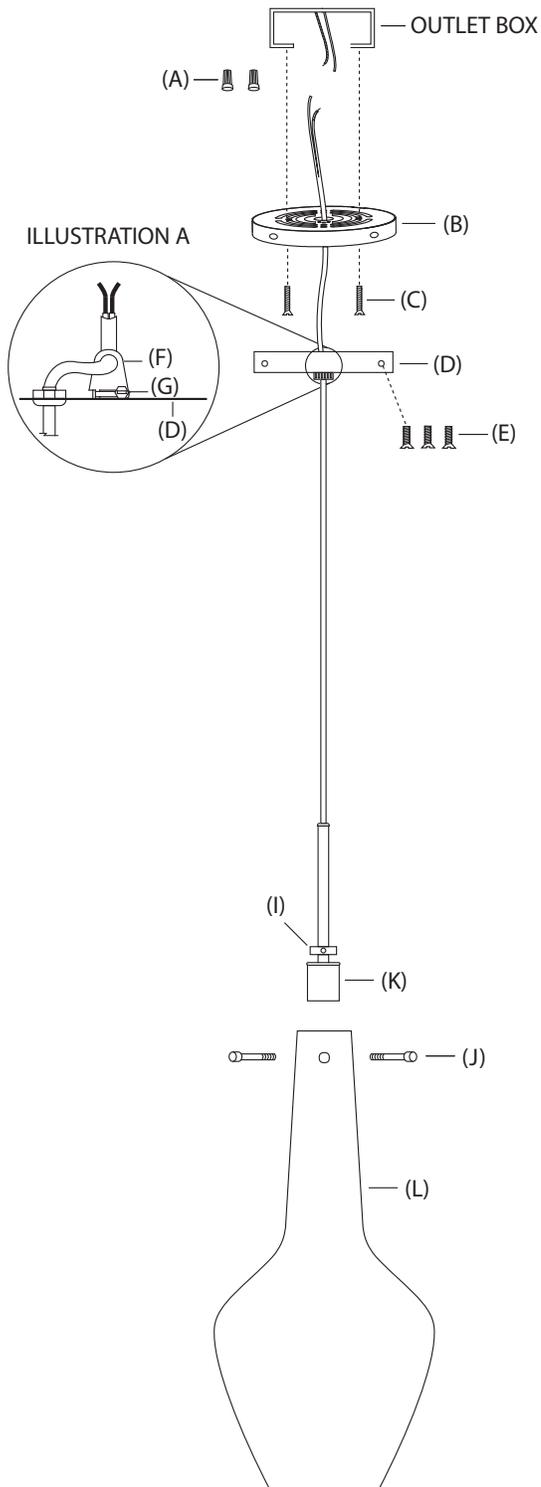

## IMPORTANT SAFETY INSTRUCTIONS:

- \*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- \*WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- \*Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- \*DO NOT subject the fixture to any shock while lit as shattering of bulbs may result.

## ASSEMBLY INSTRUCTIONS

\*\*\*\*SHUT OFF ELECTRICAL SUPPLY AT CIRCUIT BREAKER\*\*\*\*

1. Remove all parts carefully from the carton. Do not throw away any parts.
2. Remove mounting plate (B) from canopy (D) by removing canopy screws (E). Set canopy screws (E) aside.
3. Affix mounting plate (B) to ceiling outlet box with mounting plate screws (C), provided.
4. From inside canopy (D), loosen screw (G) on clamp (F). Completely remove cord from canopy (D).
5. Pass cord through bottom opening in glass shade (L). Carefully pull the cord through the shade until socket (K) is moved inside glass shade (L).
6. Align holes around the top of glass shade (L) with holes in housing (I). Carefully insert shade pins (J) through holes in glass shade (L) and thread them into holes in housing (I).
7. Measure desired drop for fixture to hang. Guide cord through hole in canopy (D) and slide it to the position of desired drop. Pass cord through clamp (F) and tighten screw (G). If necessary, cut excess cord, leaving 3 or 4 inches of length for wire connections.
8. Lift canopy (D) to ceiling outlet box; make proper electrical connection. A LICENSED ELECTRICIAN IS RECOMMENDED.
9. Attach ground wire from outlet box (green or copper in color) to ground wire in outlet box.
10. Attach hot wire from fixture (black in color, or smooth side of wire) to hot wire from ceiling outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
11. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from ceiling outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
12. Gently push wire connections back into ceiling outlet box.
13. Place canopy (D) flush against ceiling. Thread canopy screws (E) through holes in canopy (D), into holes in mounting plate (A).
14. Insert one (1) 60W MAX. Type A, medium base bulb into socket (K).

\*To clean use soft cloth only. Do not use chemical or abrasive cleaners.\*